


Warnings

The flashlight will get hot in Turbo mode quickly and discharge the battery by high current. Don't leave it without your attention as very bright light can heat objects and be a cause of the fire.

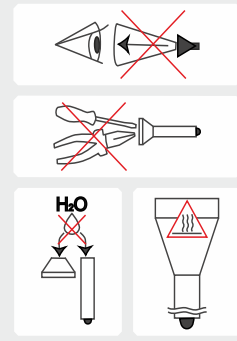

1. Always follow the instructions from this manual and recommendations on battery usage.
2. Apply only the recommended power sources.
3. Do not reverse battery polarity.
4. Do not use different power sources together, i.e. old ones with new ones, charged with discharged. Do not use different types of batteries combined as the element with less capacity can be damaged.
5. Do not modify or recast the flashlight and its components as it will deprive you of the warranty.
6. Do not allow water or any other liquid to leak into the flashlight.
7. Do not aim a switched-on flashlight at people's or animals' eyes – it can cause temporary blindness.
8. Do not allow children to use the flashlight without your assistance.

! *The producer will not be liable for any harm done to the user if it was caused by improper use of the product.*

Care and Storage

It is recommended to clean the threads and O-rings off dirt and old grease once or twice per year. Remember that reliable protection from water and dust cannot be provided by worn out sealing. The fouling as well as lack of lubricant cause fast wear-out of threads and sealing rings.

To clean the threads do the following:

1. Unscrew the tailcap and remove the sealing ring carefully with a toothpick (do not use sharp metal things as they can damage the ring).
2. Wipe the sealing ring thoroughly with a soft cloth (or tissue). Do not use solvents. If the sealing ring is worn out or damaged replace it by a new one.
3. Clean the metal threads with a brush using ethanol. Be careful not to allow the applied liquid to get inside the flashlight or tailcap as it can cause fails in functionality of the flashlight.

After cleaning lubricate the thread and the sealing ring with polyalphaolefin-based silica grease, e.g. Nyogel 760G. The application of automotive and other improper grease can cause swelling and damage of the sealing rings.

In case of active operation and exploitation in dusty environments, it is recommended to perform cleaning and lubricating of the parts as often as required.

Service and Warranty

Armytek provides free warranty repair for 10 years from the date of purchase.

Warranty doesn't cover damage caused by:

1. Improper usage.
2. Attempts to modify or repair the flashlight by nonqualified specialists.
3. Longtime application in chlorinated or polluted water, or other liquids (other than water).
4. High temperatures and chemicals' exposure (including the exposure of liquid from defected batteries).
5. Usage of low-quality batteries.

Armytek Optoelectronics Inc.

Web: www.armytek.com Email: service@armytek.com
Address: 13-85 West Wilmot St, Richmond Hill, Ontario, L4B 1K7, Canada

Specifications are subject to change without notice.

Wizard

THE MOST TECHNICALLY ADVANCED
FLASHLIGHTS IN THE WORLD

USER MANUAL

Thank you for choosing the products of Armytek Optoelectronics Inc., Canada.
Please read this manual carefully before using the flashlight.

Specifications

Armytek Optoelectronics Inc. is a Canadian manufacturer that produces powerful and reliable flashlights designed especially for your needs. The components made in the USA and Japan. **10 years no-hassle warranty.**


- Amazingly powerful multi-flashlight with 1250 LED lm brightness powered by only one 18650 Li-Ion battery.
- TIR optics with light angles 70°:120° for wide light without a "tunnel vision" effect.
- Reliable headband made of soft elastic material for comfortable fixation of the lamp on the head.
- Easy operation and 6 convenient brightness modes.
- Due to a side switch button you can operate the multi-flashlight easily with one hand without shifting it aside.
- Compact and light-weight but at the same time durable and multi-functional flashlight.
- Record runtimes – up to 100 days of operation on one battery.
- Magnet in the tailcap, removable clip for fixation on a belt and flat tailcap for vertical standing.
- Complete correspondence to the highest standards of durability and reliability: the multi-flashlight easily withstands fallings, impacts and vibrations.

Model	Wizard	
LED / Optics	Cree XP-L or XM-L2 / TIR	
Brightness stabilization type	DIGITAL (CPU brightness control)	
Light output, LED / OTF lumens*	1250 / 1000	
Peak beam intensity, candelas	3560	
Hotspot / spill	70° / 120°	
Beam distance*	119 meters	
Modes and runtimes (measured with 18650 Li-Ion 3400mAh until the light output drops to 10% of the initial value)	Turbo	1000 lm / 1.5h
	Main3	390 lm / 3.8h
	Main2	180 lm / 9h
	Main1	30 lm / 48h
	Firefly2	2.3 lm / 18d
Firefly1	0.4 lm / 100d	
Power source	1x18650 Li-Ion / 2x18350 Li-ion / 2xRCR123 Li-ion / 2xCR123A	
Size and weight (without batteries)	Length 101mm, body diameter 24.5mm, head diameter 29mm, weight 48g	

* Light output for flashlights with Warm light are about 7% less, beam distances are about 3% less.

! *We DO NOT RECOMMEND to use CR123A batteries as a power source for often and continuous flashlight's operation. Remember that old or low-quality disposal batteries can be damaged under heavy load and explode.*

Set description

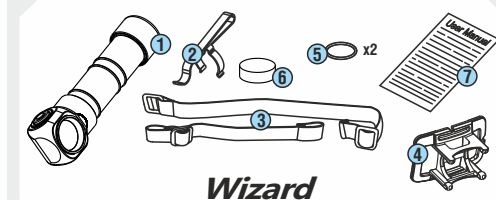

Wizard


Items included in the package:

- 1 - Flashlight
- 2 - Clip
- 3 - Headband (2 straps)
- 4 - Plastic holder
- 5 - 2 spare O-rings
- 6 - Magnet
- 7 - User manual



- ✓ Your flashlight can considerably differ from the pictures in the manual.
- ✓ The producer reserves the right to change the package at his own discretion without modifying this manual.

Initial Service

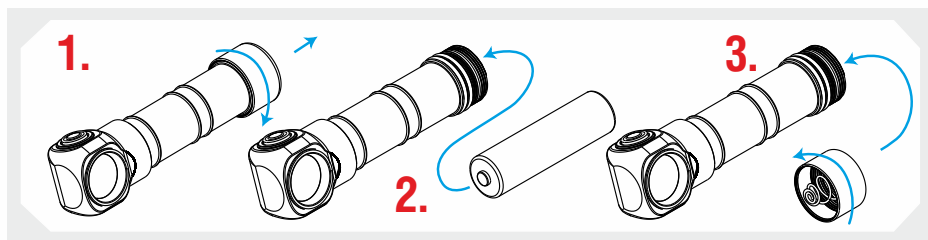

To set/replace batteries:

1. Unscrew the tailcap.
2. Place the batteries with the positive contact (+) facing the head of the flashlight.
3. Adjust the tailcap and tighten it as far as it can go.


The flashlight is ready for operation.




We DO NOT RECOMMEND to leave power sources inside the flashlight for a long storage period, as batteries (especially, non-rechargeable) can leak for various reasons and damage the inner parts of the flashlight. If you want to keep your flashlight in a stand-by state with batteries in then use new and high-quality batteries and store the flashlight in acceptable for batteries operational temperature and revise the batteries' state at least once a month. If you have noticed any signs of batteries' defects then withdraw them from the flashlight and utilize. It is also recommended to replace discharged batteries with new ones before the storage as the chance of leakage is higher with discharged batteries.

To use the headmount with the flashlight:

1. Pass the end of the band **A** through the eye of the band **B**.
2. Pass the band **A** through the eye of the band **B**.

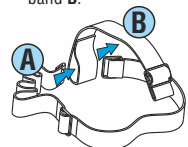


3. Put in the band **A** in the first clasp.
4. Pass the end of the band **A** through the second clasp and fix it.
5. Put in the bands through the slots in the plastic holder and fix the flashlight. Adjust elastic bands to the size of your head.



How to turn on a magnet charger:

Unscrew the tailcap for 1/4 of a circle and turn on a magnet charger device to the tailcap.



Charger device battery indication:

1. Red color – the charging is going on.
2. Green color – the charging is finished.
3. Red color blinking – unscrew the tailcap for 1/4 for charging.

Operation

In OFF state:

Click: To turn on the last used mode.

Press and hold: To go through 2 Firefly modes (release to select). Keeping button pressed will start cycling through the Main modes.

In ON state:


Click: To turn off the flashlight.

Press and hold: To start cycling through the Main modes.

Double click: To turn on the Turbo mode. The second double click brings back the last used mode.

For comfortable operation you have a convenient momentary access to all the following modes:

Press & Hold

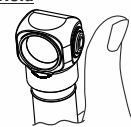


OFF → Firefly1 → Firefly2

Firefly

Firefly. Press and hold the button in OFF-state to turn on the desired Firefly mode and then release immediately. Keeping the button pressed will start cycling through the Main modes.

Click x1

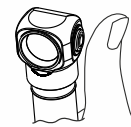


OFF → Main (if last used)

Main

Main. Short click from OFF-state activates the Main mode (if it was the last mode used previously).

Click x2

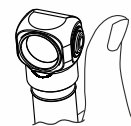

Any mode → Turbo
Turbo → Last mode

Turbo

Turbo. The mode is activated by double click in any mode. To return to the last mode make double-click again.

Press & Hold



Main1 → Main2
Main3

Cycling through Modes

Cycling through the Main modes. In ON-state press and hold the button (in any mode): the 3 Main modes will start switching cyclically. Release the button to select the desired mode. In Turbo mode it starts cycling through the Main modes.

Automemorizing. After switching off the last used Mode is memorized for quick 1-click access at next switching on.

Lock-out function. Unscrew the tailcap to 1/4 for the protection from accidental switching on.

Low Battery Indication

Warning



Critical



→ Firefly1
→ OFF

Low Battery Indication. If the brightness is <25% from the nominal value, the LED flashes 2 times ONCE (after 30sec from switching on). If you are not sure if it flashed or not switch the flashlight off and on: in case the battery is low flashes will repeat. Light output decreases to Firefly mode at critical level.

Active temperature control. The flashlight can quickly heat up in Turbo mode. When the temperature become +60°C – the brightness decreases by small steps. After cooling-down (provided that battery voltage is sufficient) the brightness increases to the Turbo mode again. This stepping goes cyclically to maintain the user's safety and the flashlight's functionality. In conditions of good air-cooling the flashlight delivers light without stepping down even in Turbo mode. There are no preset timers for stepping, but real-time active temperature measurements.